



Magic Bullet NutriBullet Curve Base

Prerequisite Only

Written By: Geary Yu





TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Curve Base



- Unplug the device from the wall and turn the powerbase upside down.

Step 2



- Use a #2 Phillips Head Screwdriver to unscrew the four 10 mm screws located on the bottom of the power base.

Step 3



- Use slight tension to remove the plastic base from the NutriBullet once all of the screws are removed.


⚠ Once the plastic base is removed, there is a fan located in the center of the powerbase. Make sure the cord does not get caught or frayed by the fan.

Step 4



- Lift the power cord to remove it from the side slot on the curved base.


Step 5

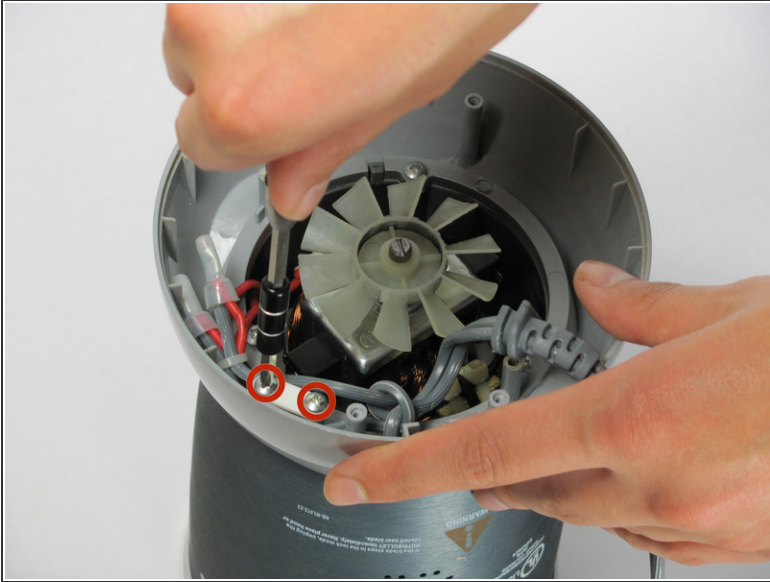

- Use a #2 Phillips Head Screwdriver to remove the two 10 mm screws that secure the white bracket down.

i The white safety bracket holds the cord down. After removing it, the cord will be loosened.

Step 6

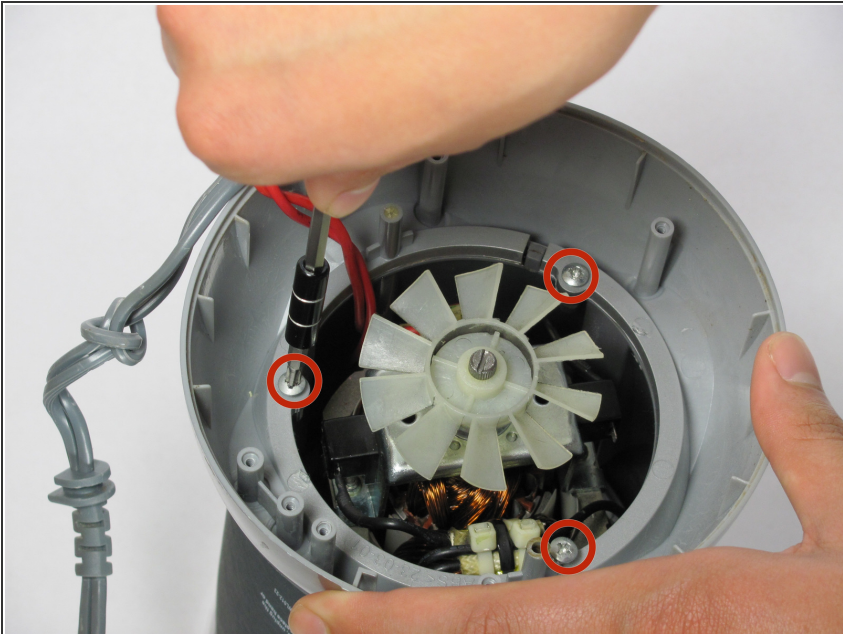

- Use a #2 Phillips Head Screwdriver to remove the three 10mm screws that keep the base in place.

Step 7



- Use slight tension to remove the curved base by lifting it upward off of the outside casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 09:06:28 PM.